


- 1. The tray is designed to position at a corner. The floor drain need to be a feasible position.
- 2. Connect drainpipe with the drainer bendon the tray and insert the other end into drain hole on the ground.
- 3. Move the tray at a suitable place and level tray with leveling pole. If it is not level, just adjust screw to level it and fasten lock nuts.
- 4. Drill holes on the wall. And insert setscrew to fixed the aluminum strip.
- 5. Fixed the two side-fixed glass, and drill holes on the side aluminum, and fasten the screw.
- 6. Fixed the centre aluminum, and fasten the screw.
- 7. Fixed the doorknob on the door. And fixed the door and adjust it. 8. Fixed the magnetic door-strip and the water proof strip.
- 9. Adjust all the things. And use the silicone to

## **INSTANLLATION MANUAL**

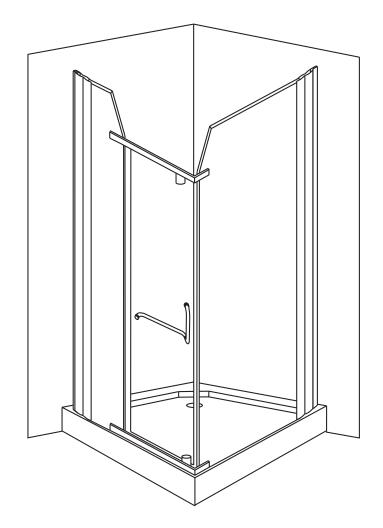

MODEL: ODA-8028

